


ROTHCO FOOTWEAR SIZE CHART



Forced Entry 6" Composite Toe Tactical Boot

Item #5584

US Men Shoe Size	Length (IN)	Length (CM)	Width (IN)	Width (CM)
4	9.51	24.15	3.27	8.30
4.5	9.66	24.54	3.31	8.40
5	9.83	24.96	3.35	8.50
5.5	10.00	25.39	3.39	8.60
6	10.16	25.81	3.43	8.70
6.5	10.33	26.23	3.46	8.80
7	10.49	26.65	3.50	8.90
7.5	10.66	27.08	3.54	9.00
8	10.83	27.50	3.58	9.10
8.5	11.02	27.98	3.62	9.20
9	11.16	28.35	3.66	9.30
9.5	11.33	28.77	3.70	9.40
10	11.49	29.19	3.74	9.50
10.5	11.66	29.62	3.78	9.60
11	11.83	30.04	3.82	9.70
11.5	11.99	30.46	3.86	9.80
12	12.16	30.88	3.90	9.90
13	12.49	31.73	3.98	10.10
14	12.83	32.58	4.06	10.30
15	13.16	33.42	4.13	10.50

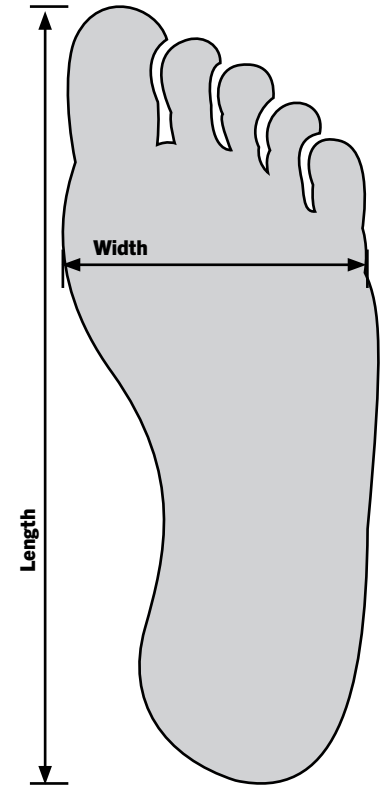

How to Measure: To find your measurement at home, closely trace your entire foot on a piece of paper and measure the drawing from heel to toe.

Use the chart to find your measurement.